 


MP8660 Quick Reference Setup Instructions


Cable Connections: Always turn power off when making any cable connections.

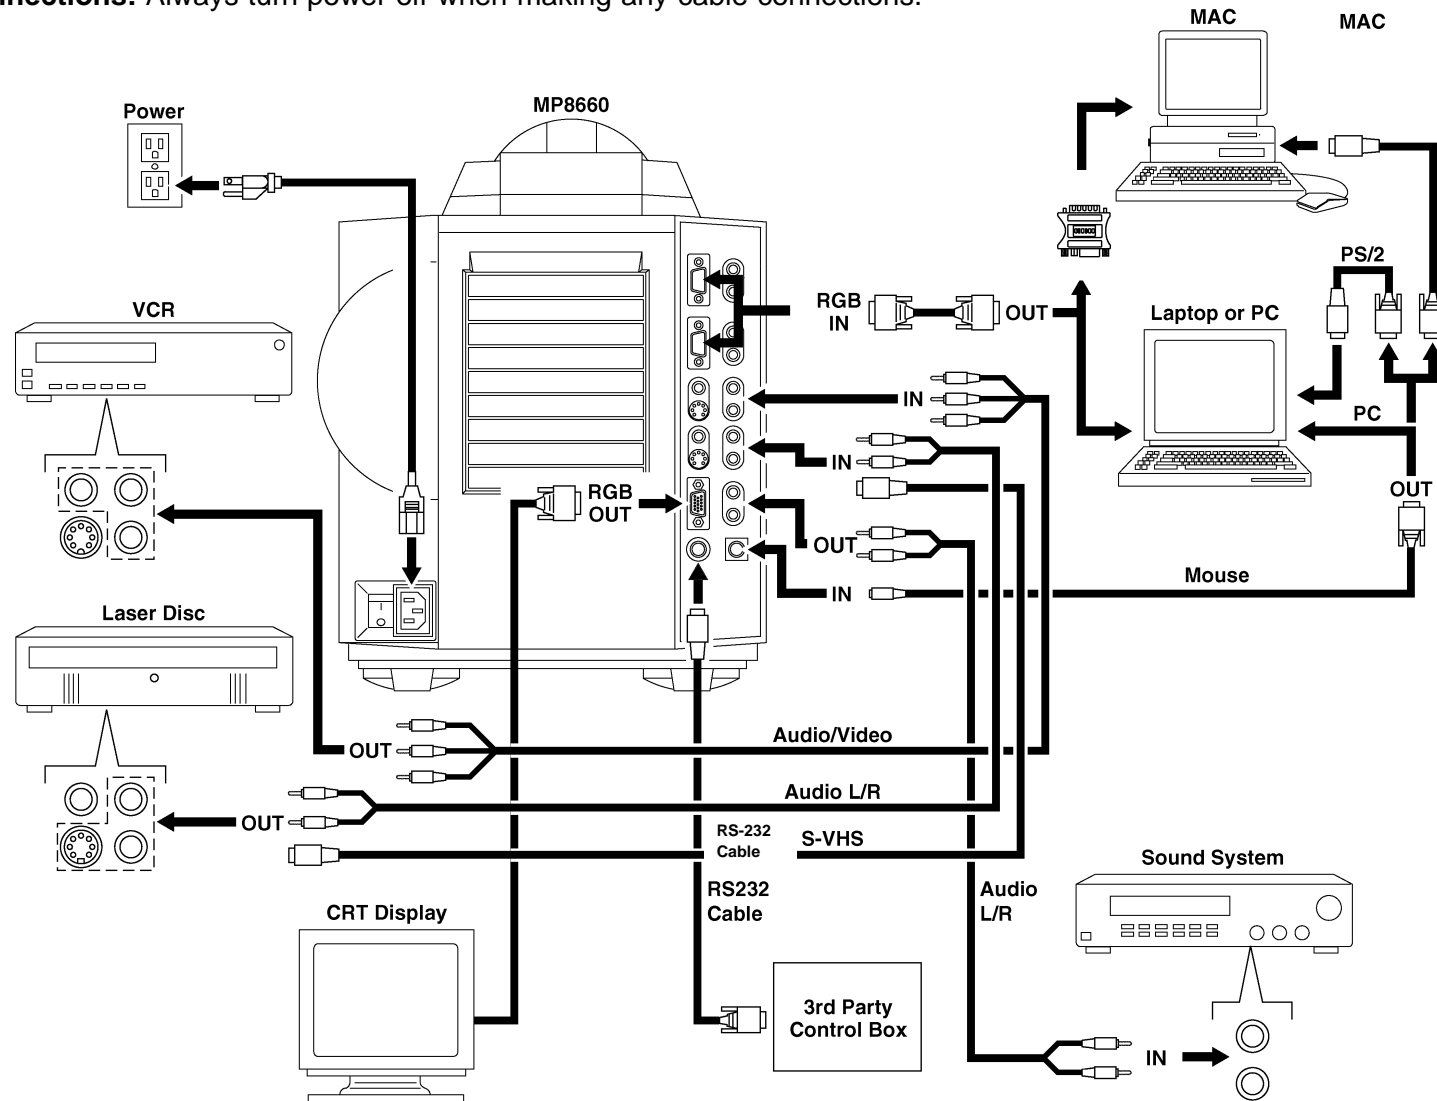

Technical Assistance & Product Information
1-800-328-1371
Internet: scvsdeps@mmm.com

MP8660 Quick Reference Setup Instructions

Projector Packout

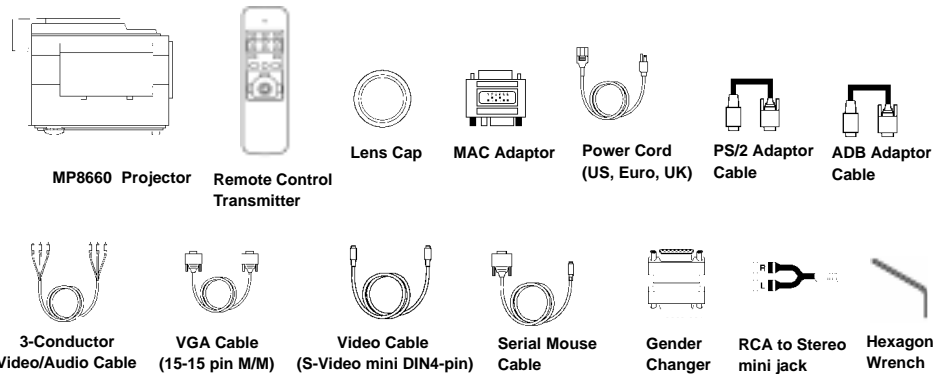

Remote Control Transmitter

Press **STANDBY/ON** to switch projector between *projection* and *standby* mode. In *projection* mode the lamp is **ON**. In *standby* mode the lamp is **OFF**.

Press **BLANK** to display a black background with no image. Press again to return the image to the screen.

Press **MUTE** to switch the audio sound **ON** or **OFF**.

Press **ZOOM** (▲▼) to increase or decrease the size of the screen image.

Press **FOCUS** (▲▼) to increase or decrease the sharpness of the screen image.

Press **VOLUME** (▲▼) to adjust internal/external speaker volume.

Press **BACK LIGHT** to light the remote buttons.

Press **RGB** to switch computer video input (RGB1 ⇒ RGB2 ⇒ RGB1).

Press **MENU** to display the on-screen menus. Move the mini-joy stick up/down or left/right as needed to navigate the menu options. Note: Press **SELECT** to choose the option that is highlighted.

Press **SELECT (L)** to choose the highlighted menu option. Refer to On-Screen Menus in Section 4.

Press **RESET** to reset menu options to the factory default setting. Refer to On-Screen Menus in Section 4.

Press **VIDEO** to switch between video inputs (VIDEO1 ⇒ VIDEO2 ⇒ VIDEO1).



Projector Operation

When all cable connections are complete, turn on the projector power first, then the power to the input sources.

1. Turn projector power "ON." Main power switch is located on backside of projector.
2. Remove lens cap.
3. Press the STANDBY/ON button. Power indicator turns from amber to green.
4. Power up input devices.
5. Press the RGB or VIDEO button to select input device.
6. Press the ZOOM +/- button to adjust image size.
7. Press the FOCUS +/- button to adjust image sharpness.
8. Press the VOLUME +/- button to adjust speaker volume.
9. Press the MENU button to display and SELECT arrows to select menu options.
10. To shutdown projector, press STANDBY/ON button. Power indicator will turn from green to amber.


Navigating System Menus

Press the MENU button on the projector control panel or remote control keypad to display the Main Menu. Press the up/down arrows ▲▼ or move the mini-joy stick up/down to move vertically within a menu, sub-menu or adjustment screen.

Press the left/right select arrows ◀▶ on the projector control panel or move the mini-joy stick left/right to move horizontally within a sub-menu or adjustment screen.

Press the SELECT button on the control panel or the SELECT (L) button on the remote to enter a selected adjustment screen.

	RGB ONLY	VIDEO ONLY		
SETUP IMAGE OPTION	BRIGHTNESS CONTRAST POSITION PHASE H SIZE MAC MODE	BRIGHTNESS CONTRAST COLOR TINT		
SETUP IMAGE OPTION	MIRROR NORMAL H INVERT V INVERT H&V INVERT	MESSAGE ON OFF		
SETUP IMAGE OPTION	LENS RETRACT AUTO MANUAL	LANGUAGE ENGLISH FRENCH SPANISH GERMAN	AUTO OFF YES NO	BEEP ON OFF
	SPECIAL TEST SCREEN FIRMWARE REV. SVGA56 H XX.X KhZ V XX.X KhZ	LAMP TIMER 1000 Hours	PANEL BLUE 00 GREEN 00	LANGUAGE BOTH FRONT REAR

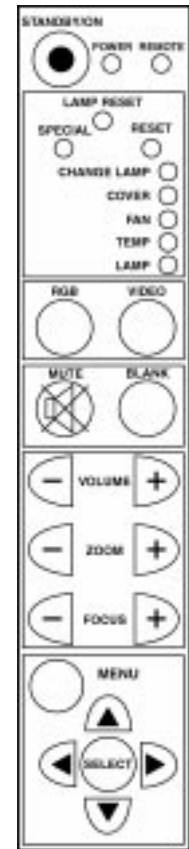

Projector Control Panel