

Kodak


DP2000 Digital Projector

Connecting the Projector

Icons on the projector will aid you when connecting the projector to a computer or video player.

Caution: Turn off the computer, monitor and projector whenever you connect the components.

Connecting to a Computer

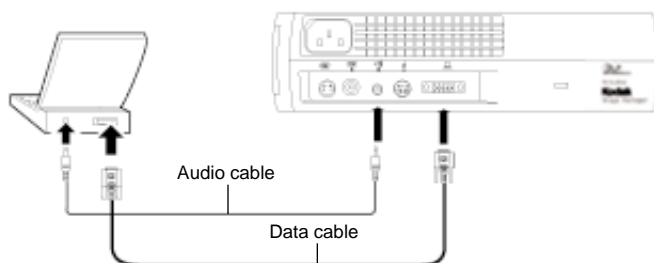


Connecting to a Video Player


If your video player uses a round, four-prong S-video connector, you'll need an S-video cable in addition to the audio cable and audio adaptor.

Note: The S-video cable is sold separately.


Connecting with Video Cable

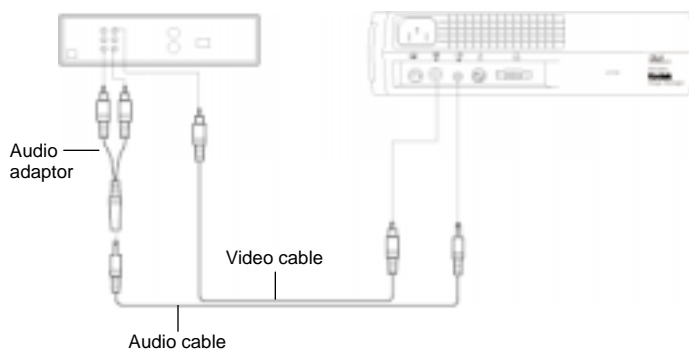


Connecting with S-video Cable

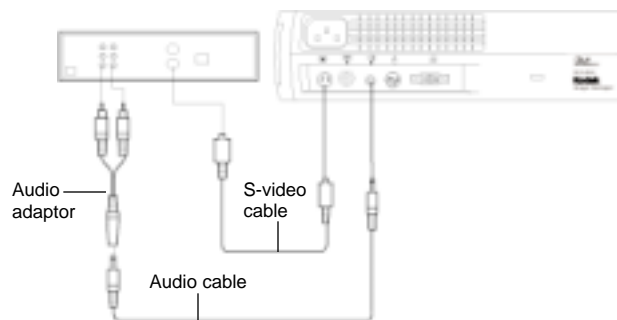

Starting the Projector


1. Remove the lens cap.
2. Plug the power cord into the side of the projector, then plug it into your electrical outlet.
3. Turn on the lamp by pressing the  button on the keypad.
4. Turn on your video source - a video player or a computer.
5. Position the projector and adjust the zoom setting for the image size you want.
 - Adjust the zoom ring.
 - Focus by rotating focus ring.
 - Be sure the projector is at a 90-degree angle to the screen.
 - Adjust the height of the projector. Press and hold the elevator button. Raise the projector to the height you want, then release the button.

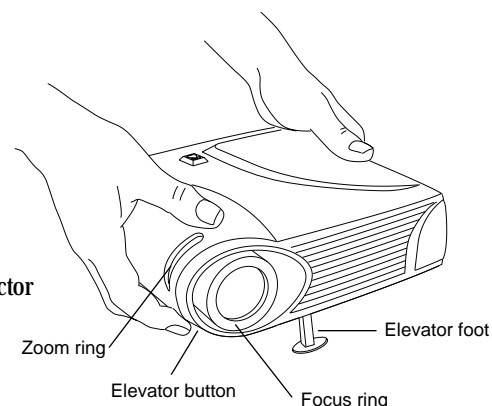

Quick Start Guide

Using the Remote Control

For best results, point the remote directly at the projector.

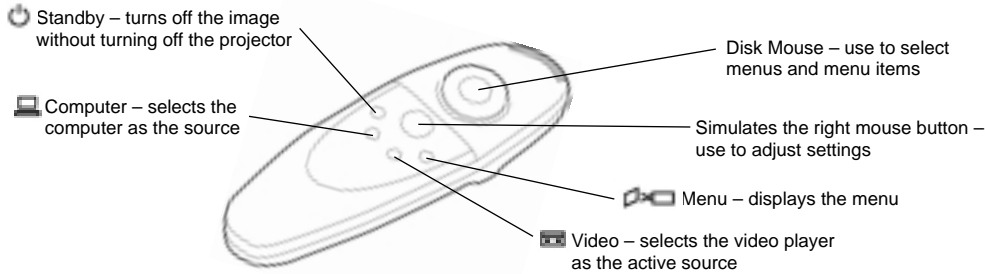

Simulates the left mouse button – use to adjust settings

Using the Keypad


While the menu is displayed, the volume, source, and standby buttons act as navigation buttons. Use them to select menu items and move to different menus.

Turning Off the Projector

To completely turn off the projector, unplug it.

If you want to turn off the display for a short period of time, press the button on the keypad or remote.

The Keypad

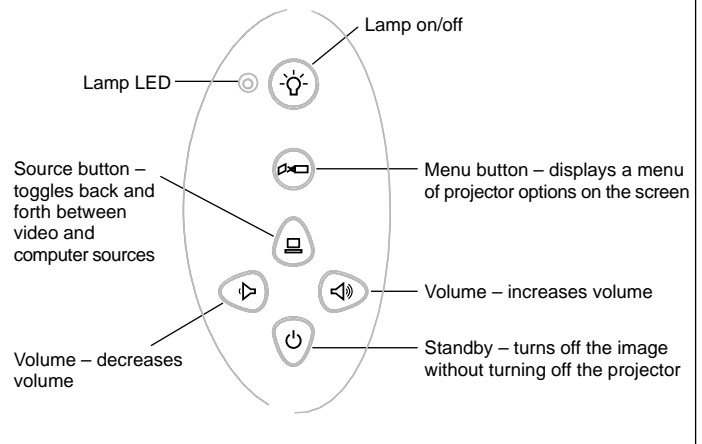

Safety Instructions

Safety Definitions

- **Warning:** Statements identify conditions or practices that could result in permanent personal injury.
- **Caution:** Statements identify conditions or practices that could result in damage to your equipment.

Safety Symbols

- Attention:** For information about use of a feature, please refer to the *Reference Manual*.
- Warning:** Hot surface. Do not touch.
- An arrow pointing to the lamp door on the projector.

Safety Terms:

- **Warning:** Don't look directly into the lens when the projector is turned on.
- **Warning:** Don't block ventilation openings.
- **Warning:** To replace the lamp, turn the display off and unplug the power cord. To avoid burns, wait 30 minutes before opening the lamp door.
- **Warning:** Please use the power cord provided. Connect the power cord to a receptacle with a protective safety (earth) ground terminal.
- **Warning:** Refer all service to qualified service personnel. Servicing your own projector will void the warranty.
- **Caution:** Don't set liquids on the projector. Spilled liquids may damage your projector.
- **Caution:** Don't place the projector on a hot surface or in direct sunlight.
- **Caution:** Do not drop the projector. Transport the projector in a Kodak-approved case.

009-0469-00

